


PT-D200 User's Guide

English Español

With your PT-D200, you can create labels for multiple applications. Select from the many frames, character sizes and styles to design beautiful custom labels. In addition, the variety of tape cartridges available allows you to print labels with different widths and exciting colors.



Power Supply and Tape Cassette

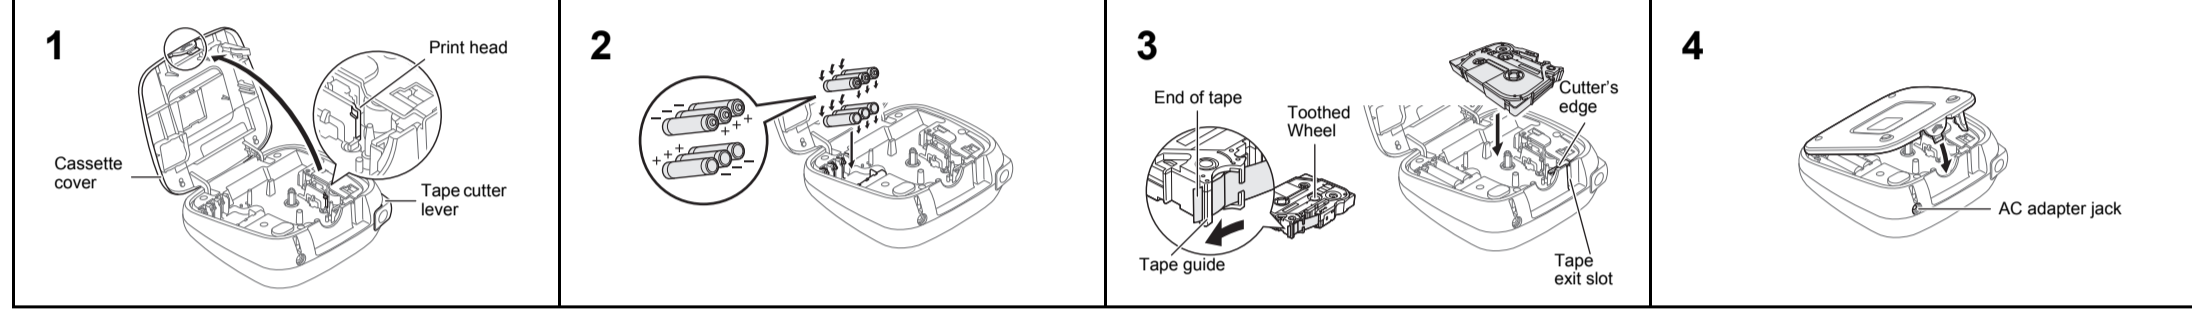

Open the cassette cover by pressing the above indicated area at the top end of the machine. If a tape cassette is already installed, remove it by pulling it straight up. Also, if batteries are already installed, remove them.


Insert six new AAA alkaline batteries (LR03) or fully charged Ni-MH batteries (HR03), making sure that their poles point in the correct directions. Users of alkaline batteries: Always replace all six batteries at the same time with brand new ones.

Insert a tape cassette, making sure that it snaps into place. Make sure that the end of the tape feeds under the tape guides.

Securely close the cassette cover, making sure that it snaps into place.

NOTE Visit us at http://solutions.brother.com/ for the latest information about the recommended batteries.

LCD Display & Keyboard

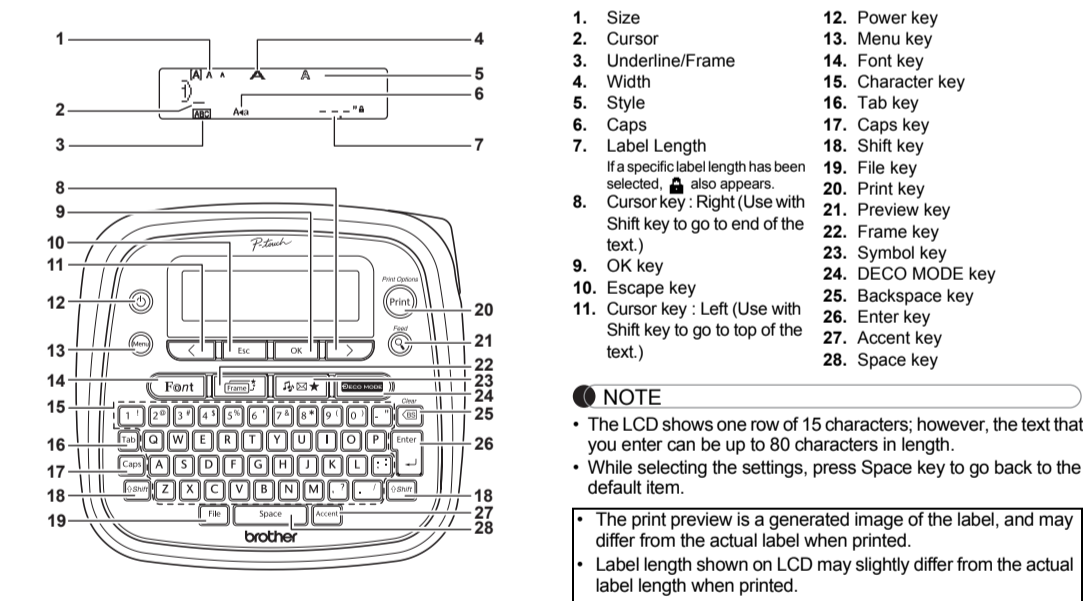

- 1. Size 2. Cursor 3. Underline/Frame 4. Width 5. Style 6. Caps 7. Label Length 8. Label Length 9. OK key 10. Escape key 11. Cursor key - Left 12. Cursor key - Right 13. Menu key 14. Font key 15. Character key 16. Tab key 17. Caps key 18. Shift key 19. File key 20. Print key 21. Preview key 22. Frame key 23. Symbol key 24. DECO MODE key 25. Backspace key 26. Enter key 27. Accent key 28. Space key

NOTE The LCD shows one row of 15 characters; however, the text that you enter can be up to 80 characters in length. While selecting the settings, press Space key to go back to the default item.

Troubleshooting

Table with 2 columns: Error message, Cause/Remedy. Rows include Low Battery, Battery Dead, Invalid!, No Text!, and Line Limit!

Table with 2 columns: Message, Cause/Remedy. Rows include No Cassette!, Cutter Error, Text Full!, Text Limit!, No Frame OK?, OK to Feed?, Insert 0.47", and Wrong Tape!

Table with 2 columns: What to do when..., Solution. Rows include display stays blank, label is printed out, machine does not print, setting has cleared, and blank horizontal line.

Table with 2 columns: Problem, Solution. Rows include machine has 'locked up', power turns off, tape does not feed, and all text and format settings.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.

Follow these guidelines to avoid personal injury, liquid leakage, burns or heat. When the P-touch labeler is not being used, store it out of the reach of children. Do not allow children to put the P-touch labeler parts or labels in their mouths.

General Precautions

Depending on the location, material, and environmental conditions, the label may unpeel or become irremovable, the color of the label may change or be transferred to other objects. Before applying the label, check the environmental conditions and on the user is encouraged to try to correct the interference by one or more of the following measures.


FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


BASIC USAGE

Entering Text

Switching Upper Case/Lower Case

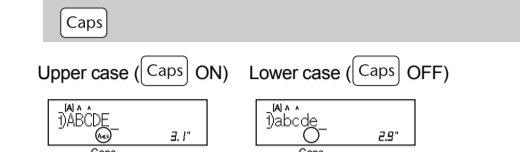


Making Two Lines of Text

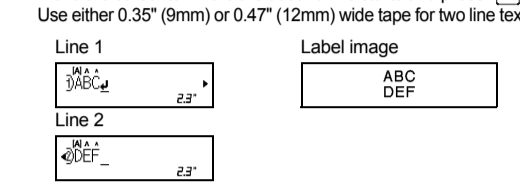


NOTE The return symbol (↵) will be displayed when the Enter key is pressed.


Entering Tab

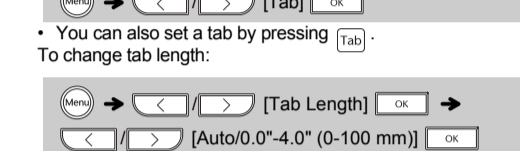

Entering Accented Characters

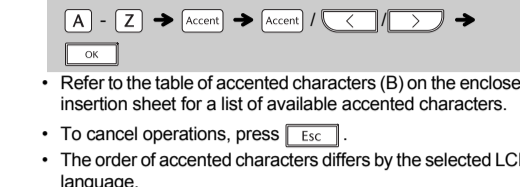


Changing Label Length

 

NOTE After the label is printed, cut along the printed dots (·) with scissors so that the label length matches the machine setting.

To Clear

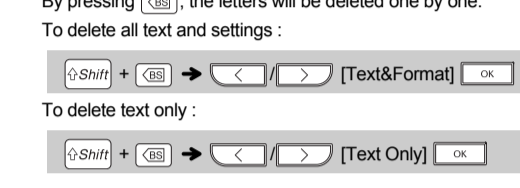

Printing Labels

Preview

You can preview the text before printing. The print preview is a generated image of the label, and may differ from the actual label when printed.


Feeding (Tape Feed)




Printing

1. Insert the plug on the adapter cord into the AC adapter jack on the top end of the machine. 2. Insert the plug into the nearest standard electrical outlet. For memory back up, we recommend using AAA alkaline batteries (LR03) or Ni-MH batteries (HR03) together when using the AC adapter.

Using Print Options

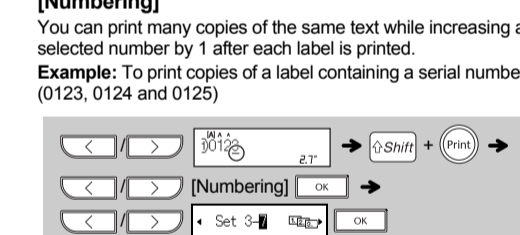

Mirror

 


NOTE Use clear tape in [Mirror], so the labels can be read correctly from the opposite side when attached on glass, windows or other transparent surfaces.


Saving Label Files

You can save up to 30 labels and recall them for printing at a later date. A maximum of 80 characters can be saved per file, a maximum total of 2400 characters for the total memory. You can also edit and overwrite the stored label.

 
Save



Print

 

Open

 


NOTE If you try to store a label when there is already a label stored in that number, a message 'Overwrite?' will appear. Press [OK] to save your new label. Press [Esc] to cancel.

USING TEMPLATES

Name Label

This function allows you to create various name labels using the built-in templates. Refer to the Name Label format table (D) on the enclosed insertion sheet.

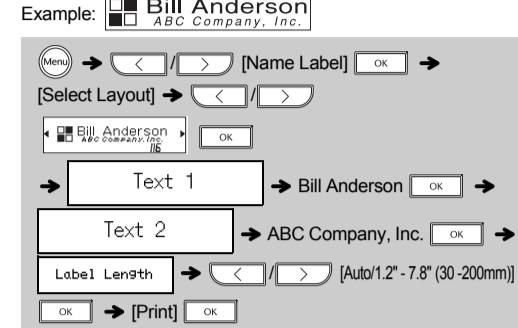


NOTE Depending on the format you have selected, the entire contents of your text may not be printed. For example, if you selected a fixed Label Length and the text is too long, an error message 'Text Limit!' will appear.

To clear all text, press [Shift] and [Clear], then 'Clear?' appears. Press [OK] to clear. Press [Esc] to cancel.

When [Auto] is selected for 'Label Length', the label will automatically adjust to the correct length for printing the text one time. Press [Esc] to return to the previous step.

DECO MODE

This function allows you to create unique labels by using built-in templates. Refer to the DECO MODE format table (C) on the enclosed insertion sheet.

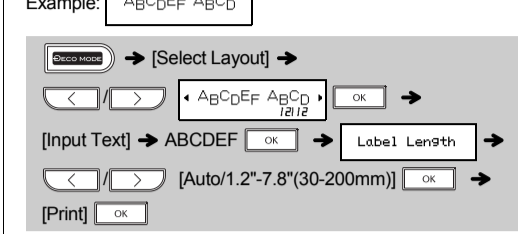

NOTE Depending on the format you have selected, the entire contents of your text may not be printed. For example, if you selected a fixed Label Length and the text is too long, an error message 'Text Limit!' will appear.

To clear all text, press [Shift] and [Clear], then 'Clear?' appears. Press [OK] to clear. Press [Esc] to cancel.

When [Auto] is selected for 'Label Length', the label will automatically adjust to the correct length for printing the text one time. Press [Esc] to return to the previous step.

USEFUL FUNCTION KEYS

Font Key

Press [Font] to select the settings to enter the text.



Press [Font] to select the settings.

Table showing font settings: Font (A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, Z), Size (Large, Medium, Small), Width (Normal, x2, x1/2, x1/3), Style (Normal, Bold, Outline, Shadow, Solid, Italic, H-Bold, H-Outline, H-Shadow, Vertical).


NOTE When [Chain Print] is set, feed the tape before using the cutter otherwise a part of the text may be cut off. Also, cut along the printed dots (·) with scissors so that the text is centered in the label.

When [Half] or [Narrow] is set, displayed label length is the length from the printed dots (·) to the end of the label.

To print more than 1 copy of a label with minimum margin, set the margin to [Narrow]. Do not pull the tape since this may damage the tape cassette.

Symbol Key

Press [Symbol] to select various symbols. Refer to the table of symbols (A) on the enclosed insertion sheet for a list of available symbols.

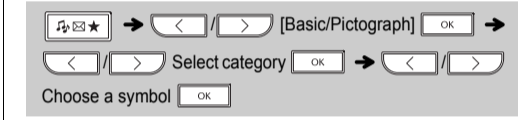

NOTE To cancel operations, press [Esc].

Short Cut Keys

Table showing short cut keys for Language, Label Length, Margin, Name Label, File, Tab, Tab Length, Clear, and Unit.

Resetting the P-touch

You can reset the P-touch labeler when you want to initialize the settings, or in the event the P-touch labeler is not working properly.

1 Turn off the P-touch labeler, hold down [Shift] and [R] and then press [Enter] to turn the P-touch back on.

2 Release [Shift] and [R]. The P-touch labeler turns on with the internal memory reset.

NOTE All text, settings and stored files are cleared.

Should you encounter any problems with your product, please do not return your product to the store! After referring to the User's guide, if you still need assistance, call Brother Customer Service at: Voice: 1-877-BROTHER Web: www.brother-usa.com Fax: 1-901-379-1210

Declaration of Conformity (Europe/Turkey only) We, BROTHER INDUSTRIES, LTD 15-1, Naeshiro-cho, Mizuho-ku, Nagoya, 467-8561, Japan declare that this product is in compliance with the essential requirements and other relevant provisions of Directives 2004/108/EC and 2009/125/EC.

The Declaration of Conformity (DoC) is on our Web site. Please go to http://solutions.brother.com -> choose region (eg. Europe) -> choose country -> choose your model -> choose 'Manuals' -> choose Declaration of Conformity ('Select Language when required).